

Terminal spec sheet



	Bay 1	Bay 2	Bay 2
Loading	Тор	Bottom	Тор
Ultra Low Sulfur Kerosene		<ul> <li>Image: A set of the set of the</li></ul>	<ul> <li>Image: A set of the set of the</li></ul>
Ultra Low Sulfur Heating Oil	<ul> <li>Image: A second s</li></ul>	<ul> <li>Image: A set of the set of the</li></ul>	
Ultra Low Sulfur Diesel		<ul> <li>Image: A start of the start of</li></ul>	✓

Address: 127 Roundhouse Rd. White River Junction, VT 05001 Hours of operation: 24/7, 365 days a year

**Phone:** 802.280.1907 **Fax:** 802.280.1830

Call our Customer Support Team at 1.866.865.8800 or email us at IOCCustomerSupport@irvingoil.com



# Hartford, VT

Terminal spec sheet

# **Driver orientation training**

To ensure all lifts are made easily and safely, we offer training for drivers. Here are the steps to take to attend our training:

## STEP 1 – Complete our compliance checklist

Please ensure you have the following documents before your orientation training. Each of these documents must be with you during every visit to our terminal.

**Carrier requirements:** 

Driver requirements:

### **STEP 2 – Schedule an appointment**

To schedule your driver orientation training, please call the Hartford terminal (802.280.1907) more than 24 hours in advance.

### **STEP 3 – Attend the training**

- The driver orientation training takes about one to two hours.
- Training includes an orientation video, review of standards and procedures, site orientation, supervised loads, and compliance checklist.
- To make the orientation faster and more efficient, you may send an experienced driver along with your new driver.
- Drivers must have ten supervised loads and meet our compliance checklist prior to receiving their access card.
- Completion of orientation is required every three years.



If you have any questions, please contact our Customer Support Team at **1.866.865.8800** or by email at **IOCCustomerSupport@irvingoil.com**.

Thanks for your business, and we look forward to serving you.